


RCW-360 WIFI USER MANUAL

Elitech cloud login: www.i-elitech.com



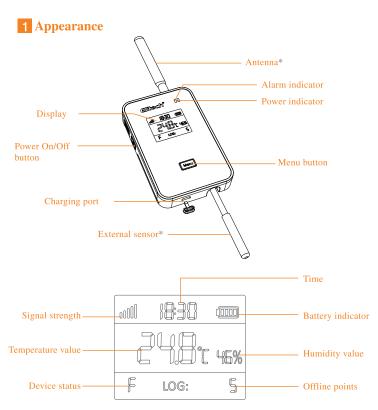



^{*}The External sensor and Atenna on the product picture shown above is for illustration purpose only and may vary from the actual product.

2 Charging

Use a cable to connect USB port to the power adapter and plug the adapter to a power supply source. During charging, the device's Power indicator light will turn to green. When the device is fully charged, the green Power indicator light will turn OFF.



3 ON/OFF

- 1) ON: Press and hold the Power ON/OFF button for 3 seconds until you hear a beep sound. The screen will light on and the device is turned ON successfully
- 2) OFF: Press and hold the Power ON/OFF button for 3 seconds until you hear a beep sound. The screen will close and the device is turned OFF successfully



4 Elitech App

1. Download APP:

Please scan the QR code on the front of the manual or search 'Elitech' on the App store or Google Play to download the app.

2. Login

Register and login to your account.



- 1. Connect your mobile phones with your preferred WiFi/WLAN network.
- 2. Open the Elitech App.
- 3. Press and the hold menu button Monu for 5 seconds until segement screen displays 'F', which means the device is now ready for wifi configurations.



4. Please follow the steps 1 to 8 below for WiFi configurations:









①Click '+'.

2 Click and scan the QR code on the back of the device.

3Click 'Add' and the device will be added.

4 Click 'OK'.









⑤Enter WiFi password.

⑥Wait for WiFi settings.

Wait for WiFi settings.

Sclick 'OK' to finish all WiFi configuration procedures.

- 5. If the configuration fails or you want to change to other WiFi network, please repeat steps 3. and 4. to re-configure.
- 6. When 'F' icon disappeared, WiFi is configured successfully.

5 Elitech Cloud

1. Login Cloud Portal

- a. Please type in this URL: www.i-elitech.com into any web browser to access the Elitech Cloud portal.
- b. Register and log into your account for more operations and functions.
- c. Click 'Help' from the Cloud Portal page to obtain more Cloud and App operation instructions.

2.Top up SIM card credit

If your device is SIM version, please top up your SIM card directly on our Elitech APP.

6 Technical Specification

Power adapter	5V/1A
Temperature measuring range	-20°C ~ + 70°C (internal), -40°C ~+80°C (external)
Temperature accuracy	±0.5℃
Temperature resolution	0.1℃
Humidity measuring range	0~100%RH
Humidity accuracy	±5%RH
Humidity resolution	1%RH
Memory capacity	32,000 points
Logging interval	5 minutes to 24 hours. Default interval is 30 minutes
Battery	Rechargeable lithium battery
Duration	Approximately 3 months at 1 hour upload (@25℃)
Protection level	Device with internal sensor: IP65;
	Device with external sensor: IP64
Sensor type	Internal: Temperature-humidity-combined sensor;
	External: Single temperature sensor or
	temperature-humidity-combined sensor;
LED indicator	Status indicator, Power indicator
Display	Segment display
Communication interface	GPRS(2G version)/4G(4G version)/WiFi(WiFi version)
Alarm mode	Buzzer alarm, email alert, app notifications
Buttons	Power ON/OFF button, Menu button



Elitech Technology. Inc.

2528 Qume Dr, Ste 2 San Jose, CA 95131 USA Tel: +1 408-898-2866 Sales: sales@elitechus.com

Support: support@elitechus.com